 


Radio Shack[®]

Cat. No. 60-2656

This product is recommended for ages 8 and up.

DUSTBOT

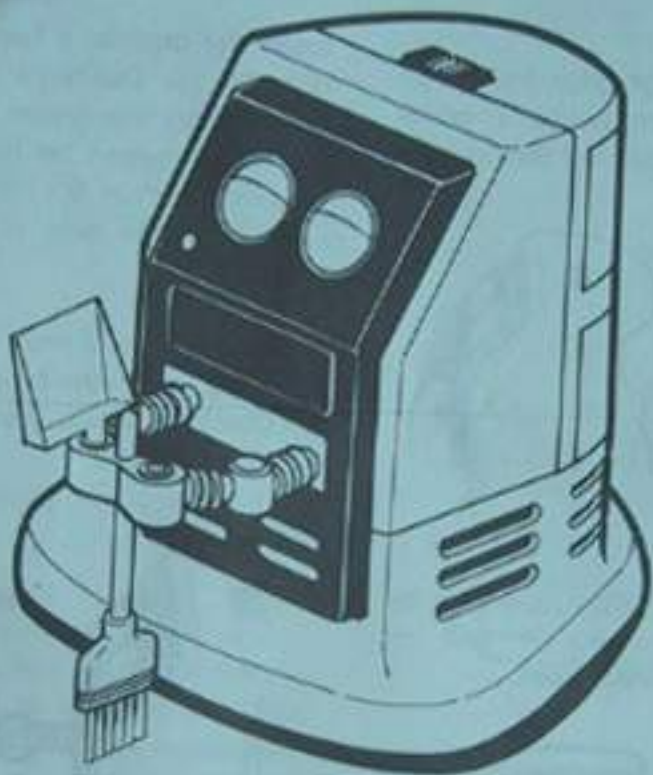

Your Radio Shack Dustbot sweeps and vacuums desks and tables. He detects the edge of a table or desk and automatically turns to avoid falling off.

©1994 Tandy Corporation.
All Rights Reserved.

 
Radio Shack is a registered trademark used by Tandy Corporation.

BATTERY INSTALLATION


The Dustbot uses two C batteries (not supplied). We recommend alkaline batteries, such as Radio Shack Cat. No. 23-551.

Follow these steps to install batteries.

1. Push in both fingerrips and lift off the battery compartment cover (located on the back of the Dustbot).

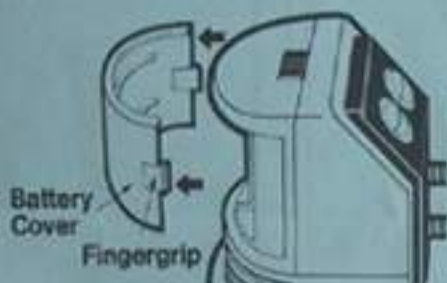

 2. Install the batteries as shown by the polarity marks (+ and -) inside the compartment.

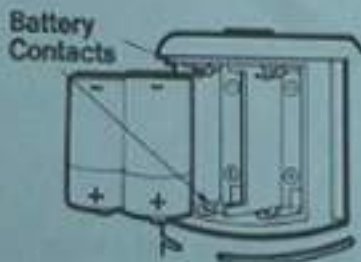

3. Replace the cover.

ATTACHING THE BROOM AND DUSTPAN

If you want the Dustbot to sweep a table or desk, you can attach the dustpan to one of the Dustbot's hands and the broom between the hands.

Insert the dustpan's handle into the hole on the Dustbot's left or right hand. Insert the broom handle into the hole between his hands, so the projected portion fits into one of the slots on either side of the center hole.

Note: if you don't want the Dustbot to sweep, place the broom in one of the Dustbot's hands. The broom won't reach the ground.



OPERATION

To turn on the Dustbot, slide the power switch on the top of the Dustbot to **ON**.



As the Dustbot moves forward, he sweeps with the broom and vacuums dust while his eyes flash. When the Dustbot reaches the edge of a table or desk, he automatically turns to the right and keeps going as soon as the path is clear.

Cautions :

- If the Dustbot runs almost parallel to an edge, he might fall off.
- The Dustbot is designed for dry vacuuming only. Do not try to vacuum liquids. Also, avoid vacuuming hair, string, or anything else that might jam the Dustbot's mechanism.

 
Notes :

- The Dustbot runs best on smooth surfaces. Do not use the Dustbot on carpet.
- If the Dustbot does not operate properly, remove and reinsert the batteries, making sure they touch the battery contacts.

CLEARING THE DUST COLLECTOR

Empty the Dustbot's dust collector after every use for the best performance.

1. Move the compartment door on the bottom of the Dustbot in the direction marked **OPEN** Δ and lift it open.
2. Hold the Dustbot right side up and shake out dust particles. Use the Dustbot's broom to brush out any remaining particles.

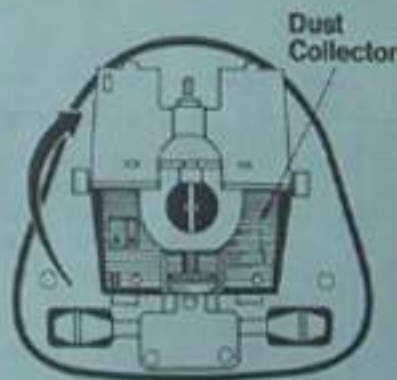

CARE AND MAINTENANCE

- If the Dustbot moves slowly on a smooth surface, replace the batteries.
- Use only fresh batteries of the required size and type.
- Always remove dead or weak batteries.
- Keep the Dustbot dry. If it gets wet, dry it immediately.
- Keep the Dustbot away from moisture or temperature extremes.
- Wipe the Dustbot with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals.
- Do not disassemble the Dustbot. This could invalidate its warranty. If the Dustbot does not work properly, take it to your local Radio Shack store for assistance.

RADIO SHACK LIMITED WARRANTY

This product is warranted against defects for 90 days from date of purchase from Radio Shack company-owned stores and authorized Radio Shack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your Radio Shack sales slip** as proof of purchase date to any Radio Shack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RADIO SHACK MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell

RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102